

LAQUA

LAQUA WQ-300 Series Smart Handheld Water Quality Meters



pH | ORP | Dissolved Oxygen | Conductivity | Resistivity | Total Dissolved Solids | Salinity | Ion



www.horiba-laqua.com



LAQUA WQ-300 Series

Smart Handheld Water Quality Meters



Meter and electrode shown in actual size

Scan code to view LAQUA WQ-300 Series feature video online



Visit the **HORIBA LAQUA** Channel on YouTube and subscribe to see more of our videos.



Large Colour Graphic LCD Screen with Backlight

All models have colour graphic digital LCD screen (70 x 52 mm) with white LED backlight for easy viewing.



Impact Resistant


Eco-friendly, Shock-proof, Scratch Resistant, and Non-slip

Apart from their high impact strength, the polycarbonate and TPE materials are also long-lasting and recyclable. The TPE provides non-slip grip and is not easily damaged by abrasion.



IP67 Waterproof and Dustproof

Fully protected from dust and capable of withstanding water immersion up to 1 meter depth for 30 mins.

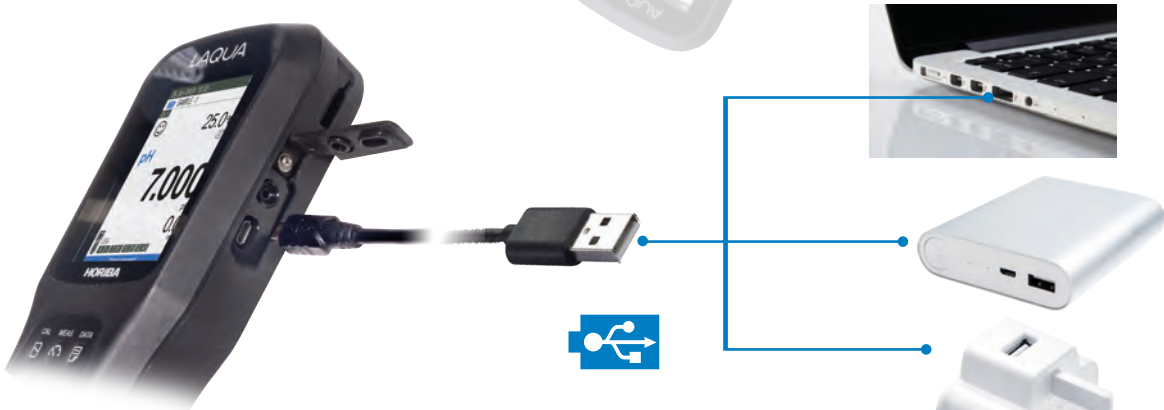

Battery and USB Powered

Four AA batteries or battery pack with micro USB cable can be used to power the meter in the field. USB charger plugged to a power outlet can be used for an uninterrupted operation in the lab.



Ergonomic Design

The black meter housing is made of polycarbonate material covered with a layer of thermoplastic elastomer (TPE) material. It is lightweight, comfortable to touch, and suitable for field applications.



LAQUA WQ-300 Series

Smart Handheld Water Quality Meters



Efficient Sensor Locking Mechanism

The push-pull connectors deliver a simple yet fast and strong method to connect and disconnect sensors. The lock is released only when the outer sleeve of the connector is pulled back so accidental disconnection is prevented.



Compatible with Conventional Electrodes having BNC and Phono Connectors and Long Cables

With 300-BNC sensor head adapter, conventional electrodes with BNC and phono connectors can be connected to the meter. Also, electrodes with up to 10m cable can be used without noise problem.



No Sensor Adapter Needed

Each sensor head has two grooves and one hook which can be used to attach up to three sensor heads.



Built-in Sensor Holders

Three grooves on the meter housing serve as sensor holders.



Hands-free Testing

Hang the meter using a wrist strap or lanyard, place it into the carrying case, or mount it to a wall while in use.



Built-in Foldable Meter Stand

Collapsible meter stand is built-in at the back of the meter for convenient usage and storage.



Sensor's LED Light as Reading Stability Indicator

Blue LED light on the sensor head flashes until the reading is stable.



English
日本語
Français
Deutsch
Español
Português
中文

Multi-Language Options

Available in several languages—English, Japanese, French, German, Spanish, Portuguese, and Chinese.




Simultaneous Calibrations and Measurements

Applicable for dual- and triple-channel models.





Versatile Channels & Adaptive Display

Single-, dual-, and triple-channel models are available. Sensors can be connected to any channel in dual- and triple-channel models and the meter screen automatically adjusts.

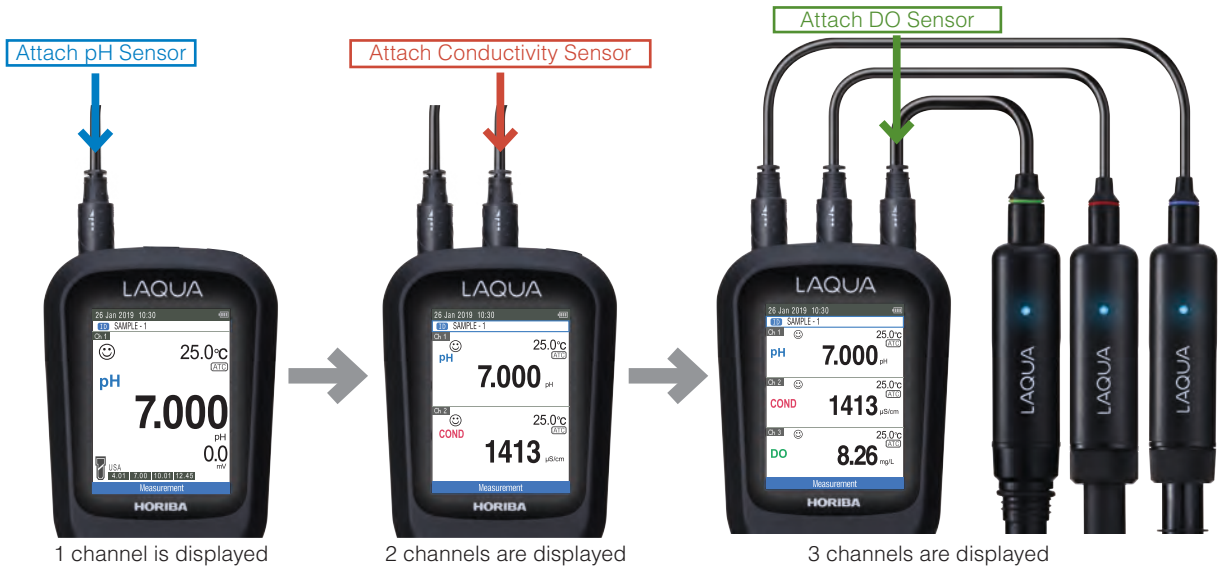

Automatic Sensor Recognition

Sensor info, calibration data, and measurement setup stored in sensor head are viewable in the meter when sensor is connected.

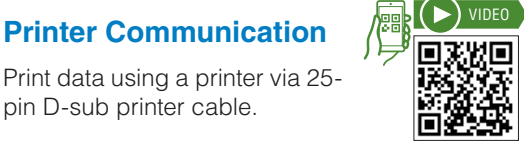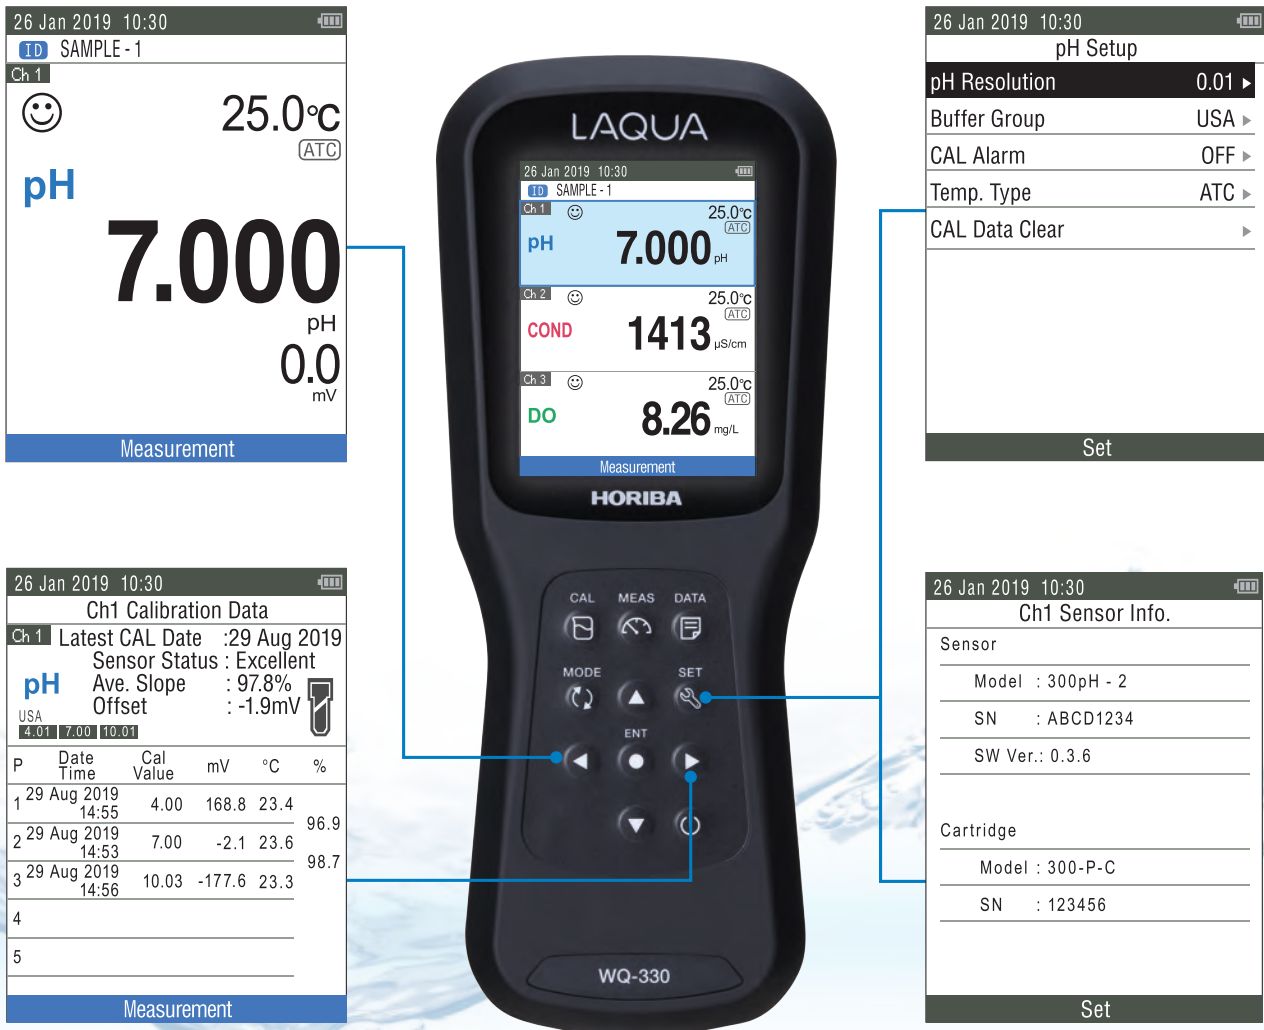


Sensor Status Indicator


Sensor icon presents the sensor condition after calibration.



Temperature Sensor Indicator

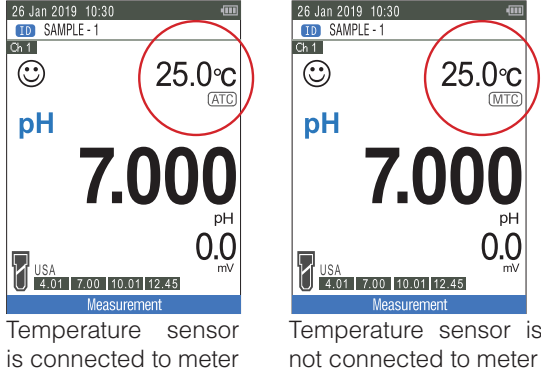


Sample ID

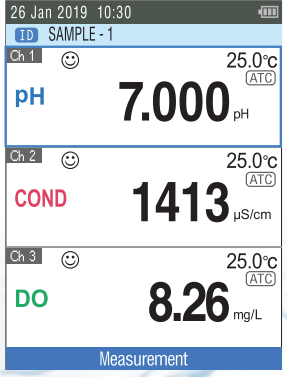


Use up to eight characters for creating Sample ID.

Calibration Data

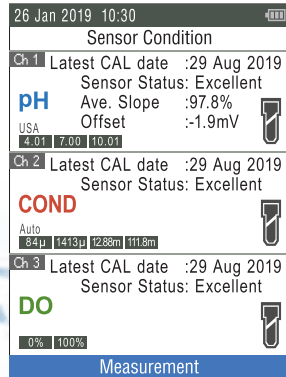

Right arrow button shows the latest calibration data.

Measurement Modes

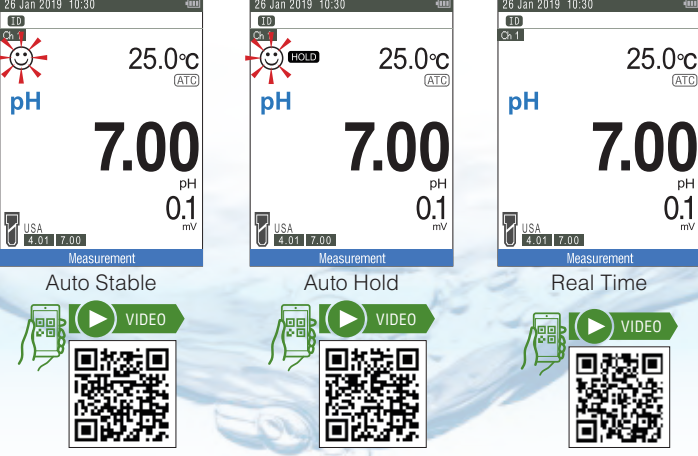

Customizable Meter Kit

Create a custom meter kit by selecting the meter, sensor, and accessories.



Up to 55 possible meter + sensor combinations

5 Combinations

WQ-310
Single Channel




15 Combinations

WQ-320
Dual Channel



35 Combinations

WQ-330
Triple Channel

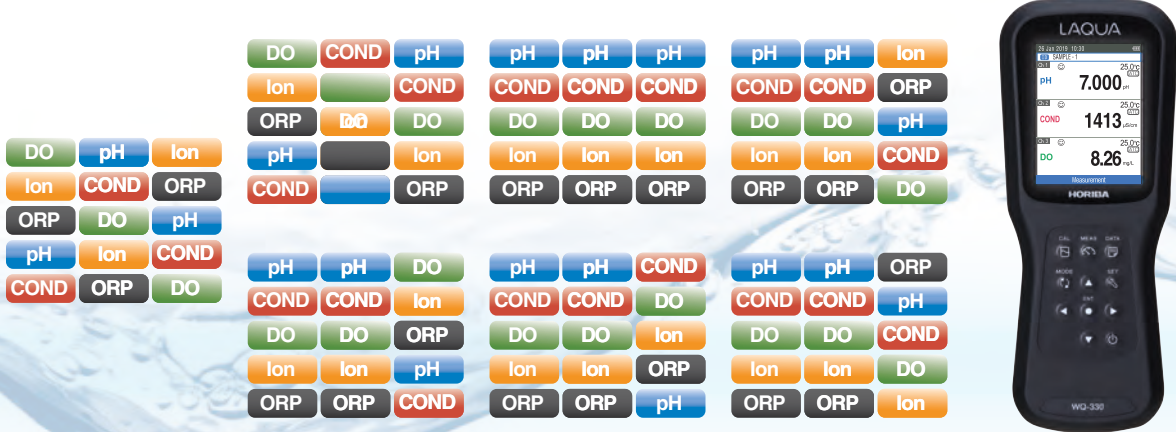

Rugged Carrying Case

Keeps all your equipment organized and secure.

Storage Space

Compartment for instruction manual and accessories.

DO Sensor Guard



Bottle Holders

Stores up to 8 x 60ml bottles of Standard Solutions

Cable Space

For sensors with extra long cables

Cable Winder

Organize sensor cables neatly.

Sensor Holders

Holds pH, Conductivity, and DO sensors

Bottle Stand


Secures the bottles upright while doing calibration.



Optical dissolved oxygen (DO) sensor

Longer usable life with excellent performance

- Easy to handle – not affected with sample flow velocity, not sensitive to hydrogen sulfide, DO sensor cap replacement after 1-2 years*
- Built-in temperature sensor
- Comes with replaceable DO sensor cap, air calibration bottle and Stainless Steel DO Sensor Protective Guard
- DO sensor heads with 2m and 5m cables are available

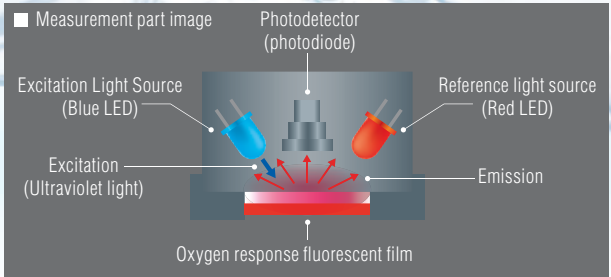

HORIBA's Unique Sensor Design

Saving the planet and reduce YOUR cost

Environmental friendly

- ❖ Only the sensor cartridge needs replacement, the sensor head with cable do not need replacement.
- ❖ Cartridges require 40% less packing material vs conventional electrodes.
- ❖ 55% Lower weight of replacement cartridges reduces carbon emissions during transport.

Economical

Just replacing the sensor cartridge is more cost effective than changing the sensor and cable.

Ease of use

Replacing the sensor is as simple as it could be.

Sensor Head

Re-usable and no need for replacement, it will last as long as the instrument and has the same warranty of 3 years.

Sensor Cartridge

Simply slide the Sensor Cartridge into the Sensor Head and fasten the screw nut.

Digital Communication

A digital signal is used for communication between the Sensor Head and the instrument ensuring a noise free signal, even when the cable is extended to 15 meter.

10 Meter Extension cable

Extend the cable length with the 300-EXT-10 extension cable.

Sensor Cable

Standard choices are 2 and 5 meter. The cable can be extend with a separate extension cable of 10 meters, maintaining the IP67 waterproof rating

Sensor head with built-in digital circuit

Retains sensor and measurement information

Sensor cartridge

Replaceable, cost efficient and environment-friendly



Scan QR code with your mobile device to know more about LAQUA Smart Digital Sensors



Sensor Head Specifications

pH Sensor Head pH / mV / Temp (°C/°F)		
Model	300PH-2	300PH-5
Part No.	3200812206	3200812207
pH Range	-2.00 to 20.00 pH -2.000 to 20.000 pH	
Resolution	-2.00 to 20.00: 0.01 pH -2.000 to 20.000: 0.001 pH	
Accuracy	-2.00 to 20.00: ±0.01 -2.000 to 20.000: ±0.005	
Calibration Points	Up to 6	
pH Buffer Groups	USA, DIN, NIST, NIST10, Custom	
mV Range	±1000.0 mV	
Resolution	0.1 mV	
Accuracy	±0.1 mV	
Temperature Range	-30.0 to 130.0 °C -22.0 to 266.0 °F	
Resolution	0.1 °C / °F	
Accuracy	±0.5 °C / ±0.9 °F	
Calibration Option	Yes	
Body Material	ABS / Polycarbonate	
Length and Diameter	85 x 30 mm	
Connector	Push-pull	
Cable Length	2 m	5 m

Ion Sensor Head Ion / mV / Temp (°C/°F)		
Model	300-I-2	300-I-5
Part No.	3200812203	3200923560
Ion Range	(mg/L, mmol/L) 0.000 to 0.999, 1.00 to 9.99, 10.0 to 99.9, 100 to 999, 1000 to 9990, 10000 to 99900	
Resolution	0.001 minimum, 3 significant digits	
Accuracy	±0.1 mV	
Calibration Points	Up to 5	
mV Range	±1000.0 mV	
Resolution	0.1 mV	
Accuracy	±0.1 mV	
Temperature Range	-30.0 to 130.0 °C -22.0 to 266.0 °F	
Resolution	0.1 °C / °F	
Accuracy	±0.5 °C / ±0.9 °F	
Calibration Option	Yes	
Body Material	ABS / Polycarbonate	
Length and Diameter	85 x 30 mm	
Connector	Push-pull	
Cable Length	2 m	5 m

Dissolved Oxygen Sensor DO (mg/L, %) / O ₂ / Temp (°C/°F)		
Model	300-D-2	300-D-5
Part No.	3200780940	3200780942
Dissolved Oxygen (DO) Range	0.00 to 20.00 mg/L 0.0 to 200.0 %	
Resolution	0.01 mg/L, 0.1%	
Accuracy	±0.2 mg/L, ±2 %	
Salinity Compensation	Auto: by conductivity sensor / Manual: 0.0 to 40.0 ppt	
Barometric Pressure Compensation	Auto: by built-in barometer / Manual: 10.0 to 199.9 kPa	
Calibration Points	Up to 2	
Oxygen Range	0.0 to 50.0%	
Resolution	0.1%	
Accuracy	±0.5%	
Temperature Range	-30.0 to 130.0 °C -22.0 to 266.0 °F	
Resolution	0.1 °C / °F	
Accuracy	±0.5 °C / ±0.9 °F	
Calibration Option	Yes	
Body Material	ABS / Polycarbonate	
Length and Diameter	200 x 16 mm	
Connector	Push-pull	
Cable Length	2 m	5 m
Sensor cap included	1	

Conductivity Sensor Head EC / Sal / TDS / Res / Temp (°C/°F)		
Model	300-C-2	300-C-5
Part No.	3200784468	3200812202
Conductivity Range	µS/cm 0.000 to 0.199 0.200 to 1.999 2.00 to 19.99 20.0 to 199.9 200 to 1999 mS/cm 2.00 to 19.99 20.0 to 199.9 200 to 2000	µS/m 0.0 to 19.9 20.0 to 199.9 200 to 1999 mS/m 2.00 to 19.99 20.0 to 199.9 200 to 1999 S/m 2.00 to 19.99 20.0 to 200.0
Resolution	Auto ranging, up to 4 significant digits	
Accuracy	± 0.5% full scale of each range > 200 mS/cm (20.0 S/m): ± 1.5% full scale	
Reference Temperature	15 to 30°C	
Temperature Coefficient	0.00 to 10.00 %/°C	
Calibration Points	Up to 4 (Auto) / Up to 5 (Manual)	
Units	S/cm, S/m	
Salinity Range	0.00 to 80.00 ppt 0.000 to 8.000 %	
Resolution	0.01 ppt, 0.001 %	
Accuracy	± 0.5% of reading or ± 0.01 ppt, whichever is greater	
Salinity Curves	NaCl, Seawater (UNESCO 1978)	
Calibration Option	Yes	
Total Dissolved Solids (TDS) Range	0.01 mg/L to 200,000 mg/L	
Resolution	0.01 minimum, 4 significant digits	
Accuracy	± 0.5% of reading or ± 0.1 mg/L, whichever is greater	
TDS Curves	Linear (0.40 to 1.00), EN27888, 442, NaCl	
Resistivity Range	Ω•cm 0.1 to 199.9 200 to 1999 kΩ•cm 2.00 to 19.99 20.0 to 199.9 200 to 1999 MΩ•cm 2.00 to 19.99 20.0 to 200.0	Ω•m 0.001 to 1.999 2.00 to 19.99 20.0 to 199.9 200 to 1999 kΩ•m 2.00 to 19.99 20.0 to 199.9 200 to 2000
Resolution	Auto ranging, up to 4 significant digits	
Accuracy	± 0.5% full scale of each range > 200 mS/cm (20.0 S/m): ± 1.5% full scale	
Temperature Range	-30.0 to 130.0 °C -22.0 to 266.0 °F	
Resolution	0.1 °C / °F	
Accuracy	±0.5 °C / ±0.9 °F	
Calibration Option	Yes	
Body Material	ABS / Polycarbonate	
Length and Diameter	85 x 30 mm	
Connector	Push-pull	
Cable Length	2 m	5 m


ORP Sensor Head ORP / Temp (°C/°F)	
Model	300-O-2
Part No.	3200812204
ORP Range	-2000 to +2000 mV
Resolution	< ±1000.0 mV: 0.1mV ≥ 1000.0 mV: 1 mV
Accuracy	< ±1000.0 mV: ±0.1 mV ≥ 1000.0 mV: ±1 mV
Calibration Option	Yes
Temperature Range	-30.0 to 130.0 °C -22.0 to 266.0 °F
Resolution	0.1 °C / °F
Accuracy	±0.5 °C / ±0.9 °F
Calibration Option	Yes
Body Material	ABS / Polycarbonate
Length and Diameter	85 x 30 mm
Connector	Push-pull
Cable Length	2 m

Electrode Cartridges

Model	pH 300-P-C	Conductivity 300-4C-C	Conductivity 300-2C-C	ORP 300-O-C	Dissolved Oxygen 300-D-M
Part Number	3200786363	3200780928	3200820579	3200922104	320078155
Measurement Range	-2.00 to 20.00 pH -2.000 to 20.000 pH	10 µS/cm to 2000 mS/cm	0.01 µS/cm to 500 µS/cm	-2000 to +2000 mV	0.00 to 20.00 mg/L 0.0 to 200.0%
Temperature Range	0 to 80 °C	0 to 100 °C	0 to 100 °C	0 to 80 °C	0 to 50 °C
Body Material	Polycarbonate, glass bulb	Epoxy, carbon	Stainless Steel	Polycarbonate, glass	PVC, PMMA
Lenght and Diameter	110 x 16 mm	110 x 16 mm	110 x 16 mm	110 x 16 mm	10 x 16 mm
Cell Constant		1.72x0.1 cm ⁻¹	1.00x0.1 cm ⁻¹		
Junction	Porous sintered polyethylene			Porous sintered polyethylene	

Flow Cell

Use the flow cell for pure and ultra pure conductivity measurements.

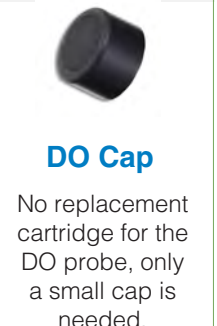

DO Cap

No replacement cartridge for the DO probe, only a small cap is needed.

Model	Ammonium 300-NH4-C	Calcium 300-CA-C	Sodium 300-NA-C	Nitrate 300-NO3-C	Potassium 300-K-C
Part Number	3200986783	3200986786	3200986787	3200986784	3200986785
Measurement Range	0.18 to 18,000 mg/L	0.4 to 40,000 mg/L	0.23 to 23,000 mg/L	0.62 to 62,000 mg/L	0.39 to 39,000 mg/L

General features of Ion selective cartridges

- Connects directly to 300-I-2 or 300-I-5
- Built in temperature sensor
- Operating temperature between 0 and 50°C
- Porous sintered polyethylene Double junction
- Body material: Polycarbonate, PVC
- Dimensions: 110 x 16 mm
- Operating temperature between 0 and 50°C
- Supplied with calibration and ISA solutions

ION Selective electrodes with BNC connection

Model	NH3 5002S-10C	Ca2+ 6583S-10C	Cl- 6560S-10C	F- 6561S-10C	NO3- 6581S-10C	K+ 6582S-10C
Part Number	3200698386	3200697410	3200697407	3200693774	3200697408	3200697409
Measurement Range	0.01 - 18,000 mg/L NH4+ (5 x 10 ⁻⁷ to 1 mol/L NH4+)	0.4 - 40,080 mg/L Ca2+ (10 ⁻⁵ to 1 mol/L Ca2+)	0.35 - 35,000 mg/L Cl- (10 ⁻⁵ to 1 mol/L Cl-)	0.02 - 19,000 mg/L F- (10 ⁻⁶ to 1 mol/L F-)	0.62 - 62,000 mg/L NO3- (10 ⁻⁵ to 1 mol/L NO3-)	0.39 - 39,000 mg/L K+ (10 ⁻⁵ to 1 mol/L K+)
Temperature Range	0 to 50 °C					
Lenght and Diameter	150 x ø15 mm, 1 meter cable with BNC					



Ion Electrodes

The ION electrodes have a BNC cable. when using it with the WQ300 Series a Sensor Adapter Head is needed.

ION Selective Replacement caps and tips

Model	NH3	Ca2+ 7683S	Cl- 7660S	F- 7661S	NO3- 7681S	K+ 7682S
Part Number	3200705774	3200697414	3200697411	3200693606	3200697412	3200697413
Description	3 caps for 5002S-10C	Electrode tip for 6583S-10C	Electrode tip for 6560S-10C	Electrode tip for 6561S-10C	Electrode tip for 6581S-10C	Electrode tip for 6582S-10C



Accessories & Solutions

pH Buffer Solutions		
Part No.	Model	Description
1300045600	250-PH-4	pH 4.01 Buffer Solution 250ml - NIST Traceable Accuracy ± 0.01 @ 25°C
1300045602	500-PH-4	pH 4.01 Buffer Solution 500ml - NIST Traceable Accuracy ± 0.01 @ 25°C
1300045599	1000-PH-4	pH 4.01 Buffer Solution 1ltr - NIST Traceable Accuracy ± 0.01 @ 25°C
1300045607	250-PH-7	pH 7.00 Buffer Solution 250ml - NIST Traceable Accuracy ± 0.01 @ 25°C
1300045608	500-PH-7	pH 7.00 Buffer Solution 500ml - NIST Traceable Accuracy ± 0.01 @ 25°C
1300045606	1000-PH-7	pH 7.00 Buffer Solution 1ltr - NIST Traceable Accuracy ± 0.01 @ 25°C
1300045604	250-PH-10	pH 10.01 Buffer Solution 250ml - NIST Traceable Accuracy ± 0.01 @ 25°C
1300045605	500-PH-10	pH 10.01 Buffer Solution 500ml - NIST Traceable Accuracy ± 0.01 @ 25°C
1300045603	1000-PH-10	pH 10.01 Buffer Solution 1ltr - NIST Traceable Accuracy ± 0.01 @ 25°C


ORP Standard Solutions		
1300045637	250-ORP-200	200mV Redox/ORP Solution 250ml - Accuracy ± 5mV @ 25°C
1300045636	250-ORP-475	475mV Redox/ORP Solution 250ml - Accuracy ± 5mV @ 25°C
1300045635	500-ORP-475	475mV Redox/ORP Solution 500ml - Accuracy ± 5mV @ 25°C
1300045634	500-ORP-650	650mV Redox/ORP Solution 500ml - Accuracy ± 5mV @ 25°C

Conductivity Standard Solutions		
1300045609	250-EC-84	84µS/cm Calibration Solution 250ml - Accuracy ± 1%, KCl
1300045632	500-EC-84	84µS/cm Calibration Solution 500ml - Accuracy ± 1%, KCl
1300045633	1000-EC-84	84µS/cm Calibration Solution 1ltr - Accuracy ± 1%, KCl
1300051602	250-EC-147	147µS/cm Calibration Solution 250ml - Accuracy ± 1%, KCl
1300045595	250-EC-1413	1413 µS/cm Calibration Solution 250ml - Accuracy ± 1%, (25°C)=0.01M KCl
1300045638	500-EC-1413	1413 µS/cm Calibration Solution 500ml - Accuracy ± 1%, (25°C)=0.01M KCl
1300045591	1000-EC-1413	1413 µS/cm Calibration Solution 1ltr - Accuracy ± 1%, (25°C)=0.01M KCl
1300045590	250-EC-1288	12.88 mS/cm Calibration Solution 250ml - Accuracy ± 1%, (25°C)=0.1M KCl
1300045639	500-EC-1288	12.88 mS/cm Calibration Solution 500ml - Accuracy ± 1%, (25°C)=0.1M KCl
1300045588	1000-EC-1288	12.88 mS/cm Calibration Solution 1ltr - Accuracy ± 1%, (25°C)=0.1M KCl
1300045630	250-EC-1118	111.8 mS/cm Calibration Solution 250ml - Accuracy ± 1%, (25°C)=1M KCl
1300045660	500-EC-1118	111.8 mS/cm Calibration Solution 500ml - Accuracy ± 1%, (25°C)=1M KCl
1300045631	1000-EC-1118	111.8 mS/cm Calibration Solution 1ltr - Accuracy ± 1%, (25°C)=1M KCl

Ion Standard Solutions		
3200697171	500-NH4-SH	1000 mg/L Ammonium Ion Standard Solution - 500ml
3200697172	500-NH4-SL	100 mg/L Ammonium Ion Standard Solution - 500ml
3200697175	500-CA-SH	1000 mg/L Calcium Ion Standard Solution - 500ml
3200697176	500-CA-SL	100 mg/L Calcium Ion Standard Solution - 500ml
3200697167	500-CL-SH	1000 mg/L Chloride Ion Standard Solution - 500ml
3200697168	500-CL-SL	100 mg/L Chloride Ion Standard Solution - 500ml
3200697163	500-F-SH	1000 mg/L Fluoride Ion Standard Solution - 500ml
3200697164	500-F-SL	100 mg/L Fluoride Ion Standard Solution - 500ml
3200697179	500-NO3-SH	1000 mg/L Nitrate Ion Standard Solution - 500ml
3200697180	500-NO3-SL	100 mg/L Nitrate Ion Standard Solution - 500ml
3200697183	500-K-SH	1000 mg/L Potassium Ion Standard Solution - 500ml
3200697184	500-K-SL	100 mg/L Potassium Ion Standard Solution - 500ml
3200987463	500-NA-SH	1000 mg/L Sodium Ion Standard Solution - 500ml
3200987464	500-NA-SL	100 mg/L Sodium Ion Standard Solution - 500ml

Ionic Strength Adjustors		
3200697174	500-NH3-ISA	Ammonia Ionic Strength Adjustor 500ml
3200987466	500-NH4-ISA	Ammonium Ionic Strength Adjustor 500ml
3200697178	500-CA-ISA	Calcium Ionic Strength Adjustor 500ml
3200697166	500-F-TISAB	Fluoride Ionic Strength Adjustor 500ml
3200697182	500-NO3-ISA	Nitrate Ionic Strength Adjustor 500ml
3200697186	500-K-ISA	Potassium Ionic Strength Adjustor 500ml
3200987465	500-NA-ISA	Sodium Ionic Strength Adjustor 500ml

Cleaning Solutions		
3014028653	220	Cleaning solution for removing inorganic sample residues, 50ml x 2pcs
3200530494	230	For removing inorganic and organic sample residues, Solution A (30ml) & Solution B (100ml)
3200366771	250	Cleaning solution for removing proteins, 400ml

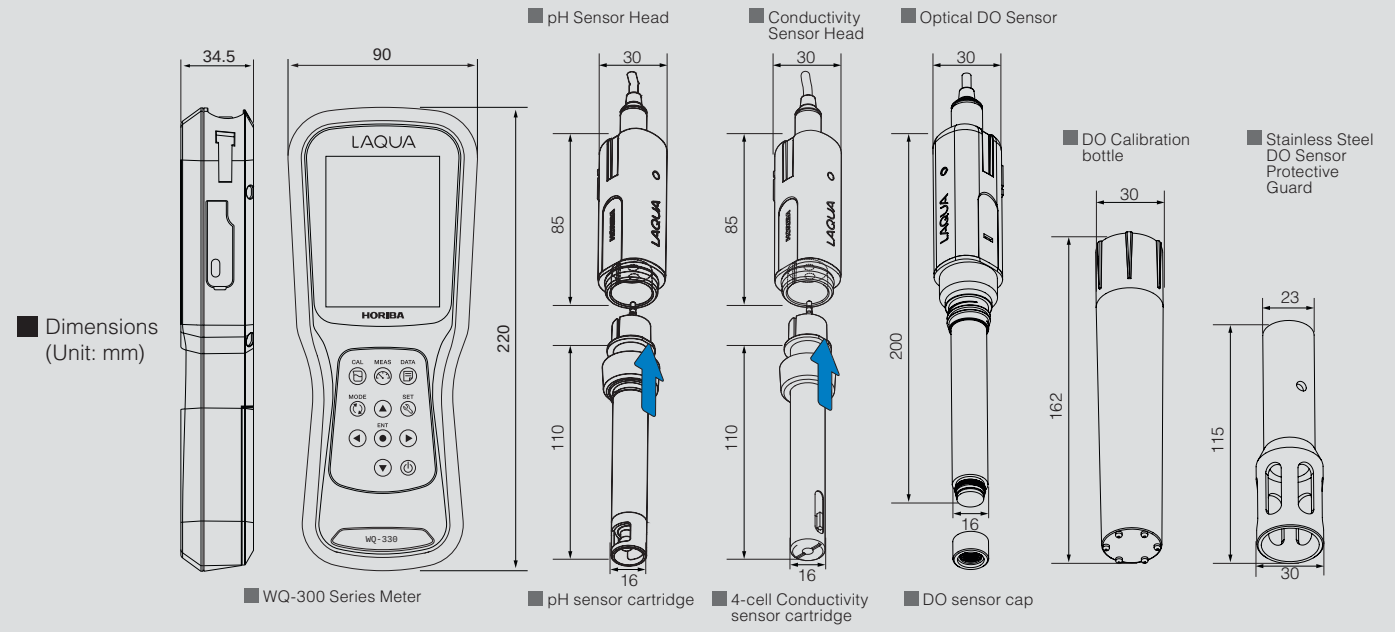

Model	WQ-310-K	WQ-320-K	WQ-330-K
Part No.	3200832605	3200832606	3200832607
Channel	Single	Dual	Triple
Memory	10,000 Data with date and time stamp		
Data Log	Auto / Manual		
Measurement Modes	Auto Stable / Auto Hold / Real Time		
Calibration Alarm	Programmable: 0 to 400 days		
Auto Power Off	Programmable: 0 to 60 minutes		
Real-time Clock	Available		
Sensor Status	On display		
Diagnostics	Error codes		
Language	English, Japanese, French, German, Spanish, Portuguese, Chinese		
PC Communication	Via micro USB cable or wireless		
Printer Communication	Via 25-pin D-sub printer (RS232) cable		
Meter Input	Push-pull connector		
Display	Color graphic TFT-LCD, 3.5 inches		
Housing	IP67, shock & scratch resistant, non-slip (ABS / polycarbonate)		
Power Requirement	4 x AA batteries / battery pack or USB charger with micro USB cable		
Battery Life	> 100 hours (with display brightness 3 and no sensor connected)		
Dimensions	220 (L) x 90 (W) x 34 (H) mm		
Weight	Approx. 400g (batteries included), 320 g (batteries excluded)		
Standard Accessories	Carrying case, 4 x AA batteries, wireless SD card, manual, and quick guide		

Accessories		
Part Number	Model	Description
3200821465	300 BNC	Connector for BNC Electrode to Electrode Head
3200921588	300-EXT-10	Extension Cable for WQ-300 series, 10 meter
3200820791	560-PH	pH 4.01, 7.00, 10.01 (60ml each)
3200820792	560-C	84uS/cm, 1413 uS/cm, 12.88 mS/cm, 111.8 mS/cm (60ml each)
3200844642	300-2C-C	300-2C-C, Flow cell for 300-2C2C conductivity sensor, glass
3014030147	Printer EU	Ink Printer. Citizen CBM-910II-24RF-230-A (without cable)
3200779638	Printer Cable 1.5m	Cable for connecting to printer (25 pin)
3014030149	Printer Paper	20pcs for printer
3014030150	Ink Ribbon	5pcs for printer
3200828646	Electrode Protect Cap	3 pcs of Protector tube for 200 and 300 series electrodes
3200043508	Electrode Protect Cap	1 pc of electrode protection cap





With over 75 years of engineering excellence, HORIBA's innovative and diverse range of water quality analyzers, electrodes and solutions are ideal for everyday needs in the laboratory and field through to the most demanding of applications.

Visit our website for a wealth of useful information and water quality measurement tips to help you obtain the best results in your work.



Benchtop Meters

Developed using extensive feedback from users, our new LAQUA bench top meters deliver the best solution for water quality analysis. The complete solution for every lab, whether it is at school, quality assurance lab or pharmaceutical industry, we have the right instrument at the right budget for you. Consult our website or electrode brochure to select the electrode most suitable for your application.



Handheld Meters

In the field, in the lab or anywhere you need it. From easy to use, single parameter to highly sophisticated digital multi parameter to Sonde type instruments, we are able to meet your needs.

The LAQUA Handheld meters are designed for one hand use with an IP67 waterproof rating and shock-resistant casing. Meters can be used for long periods, even in dark places, making it ideal for field measurements in rivers and lakes.



LAQUATwin meters and Kits

Analyzing water quality is simplified when using our LAQUATwin range of meters. A unique flat surface sensor technology enables to measure even the smallest samples.

Designed to produce accurate and reliable results. Anyone, anywhere, at any time can measure samples easily with a LAQUATwin meter. Use the LAQUATwin 4M carrying case to conveniently store and transport up to 7 meters, a true lab on the go. See just how good they are at our website.



Electrodes

Various electrodes to match any application. A wide range for both benchtop and portable systems are available, including easy and reliable standard models, application-focused models for small samples or large containers, and special electrodes for specific sample characteristics.



Solutions

A complete range of high quality calibration, buffer, filling and cleaning solutions is available for pH, conductivity, ORP and ion selective measurements. Free of charge Certificates of Analysis are available on selected items.



Application Notes

LAQUATwin pocket meters offer a quick and convenient alternative to analyze important parameters with high accuracy. Several application notes are available at (<http://goo.gl/znwE6j>) detailing the use of LAQUATwin and the results achieved for the respective applications

HORIBA UK YouTube

View product instruction videos, get technical tips, learn about applications and more.



Europe, Middle East, & Africa
HORIBA UK Limited

Kyoto Close, Moulton Park,
Northampton NN3 6FL
Phone: +44 1604 642500
e-mail: waterquality@horiba.com



- The contents of this catalog are subject to change without prior notice, and without any subsequent liability to this company.
- The color of the actual products may differ from the color pictured in this catalog due to printing limitations.
- It is strictly forbidden to copy the content of this catalog in part or in full.
- All brand names, product names and service names in this catalog are trademarks or registered trademarks of their respective companies.
- Complies with all ACMA RCM compliance requirements EMC Systems Doc Number: C160104-3